



## Technical Service Information Bulletin

September 22, 2006

Title:

# INITIALIZATION OF ADVANCED PARKING GUIDANCE SYSTEM

Models:

'07 LS 460

PD068-06

PRE-DELIVERY SERVICE

**Introduction** The Advanced Parking Guidance System assists the driver during parking and parallel parking by displaying an image of the area behind the vehicle and controlling the steering wheel with the vehicle in reverse.

As a result of removing the DCC fuses or disconnecting the battery, the power source to the steering angle sensor is cut off. When the DCC fuses are reinstalled or the battery terminal is reconnected, the rear view monitor will be operative, but it cannot assist back up parking operation because the center position recognized by the steering angle sensor may not be initialized.

Initialize the Advanced Parking Guidance System after installing the DCC fuses during Pre-delivery Service (PDS) at the dealership.

**NOTE:**

Any time the battery terminal has been disconnected, the Advanced Parking Guidance System **MUST** be re-initialized.


- Applicable Vehicles**
- 2007 model year **LS 460** vehicles.

**Warranty Information**

| OP CODE | DESCRIPTION                | TIME | OFB | T1 | T2 |
|---------|----------------------------|------|-----|----|----|
| N/A     | Not Applicable to Warranty | -    | -   | -  | -  |

**Initialization Procedure**

1. Start the engine.
2. Check if the Advanced Parking Guidance System is operative by shifting the shift lever to the "R" position.  
"System initializing." appears on the rear view monitor as shown in the illustration.
3. Shift the shift lever to the "P" position and turn the steering wheel lock to lock.

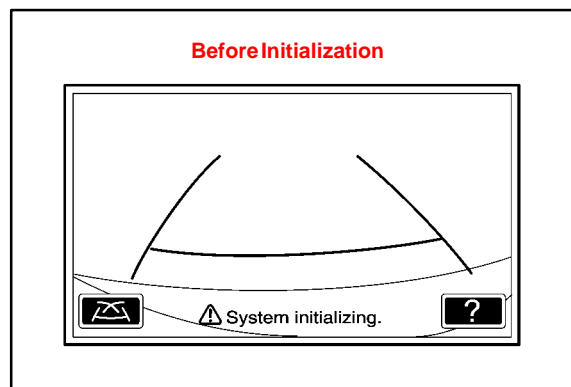

**Initialization  
Procedure**  
(Continued)

4. Shift the lever to the “R” position.  
When “Check surroundings for safety.” appears on the rear view monitor (as shown in the illustration), the initialization of the Advanced Parking Guidance System has been completed.

