



**Technical Service  
Information Bulletin**

September 27, 2006

Title:

# INITIALIZATION OF FRONT MEMORY SEAT ECU DURING PDS

Models:

'07 LS 460

REVISED

PD075-06

PRE-DELIVERY SERVICE

**TSIB REVISION NOTICE:**

- **November 10, 2006:** Step 1 and the corresponding illustration in “Driver’s Seat Initialization Procedure” section have been updated. The “Front Passenger’s Seat Initialization Procedure” section has been added.

Previous versions of this TSIB should be discarded.

**Introduction**

As a result of the removal of the DCC fuses (No. 1 and No. 2), the “driving position memory” function of the driver’s seat will be inoperative due to loss of the seat position memory stored in the seat ECU.

Initialize the front memory seat ECU after installing the DCC fuses during Pre-Delivery Service (PDS).

**Applicable  
Vehicles**

- **2007** model year **LS 460** vehicles.


**Warranty  
Information**

OP CODE	DESCRIPTION	TIME	OFF	T1	T2
N/A	Not Applicable to Warranty	–	–	–	–

**Driver’s Seat  
Initialization  
Procedure**

1. Turn the ignition switch to the “IG-ON” position, operate the front vertical height switch to the lower side 3 times.

Within 10 seconds, simultaneously operate the seatback angle switch to the rear side and the vertical height adjustment switch to the lower side until a beep is heard.

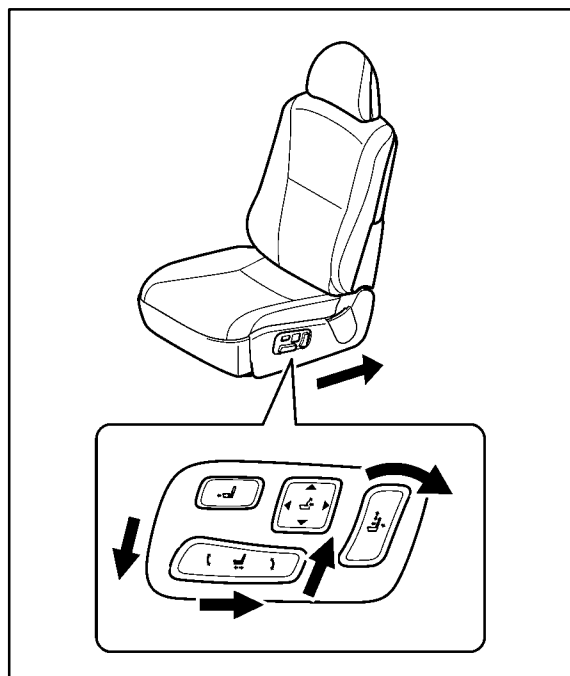

**Driver's Seat  
Initialization  
Procedure**  
(Continued)

2. Operate the seat position control switch and slide the seat to the rearmost position.

**NOTE:**

**When operating the control switch, the warning buzzer sounds.**



After operating the seat position control switch, the following operations will occur automatically:

- The head restraint automatically moves to the uppermost position and a beep is heard.
- The seat cushion length automatically slides to the rearmost position and a beep is heard.

**HINT:**


**The two seat operations described above occur simultaneously.**

3. Move the seatback angle switch forward until a beep is heard.

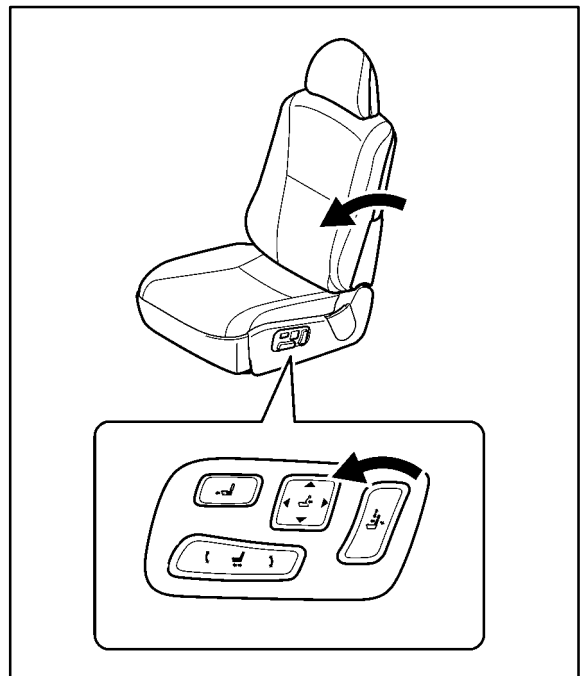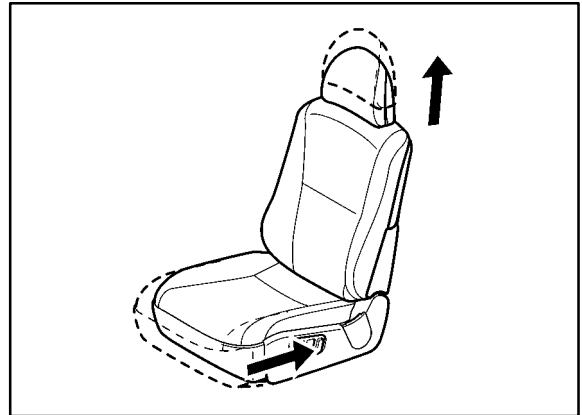

**Driver's Seat Initialization Procedure**  
(Continued)

4. Operate the head restraint height adjustment switch and check that the head restraint moves to the uppermost and lowermost positions normally. (Refer to "1" in the illustration.)
5. Operate the seat position control switch and check that the seat slides forward and rearward and that the beep is NOT heard. (Refer to "2" in the illustration.)

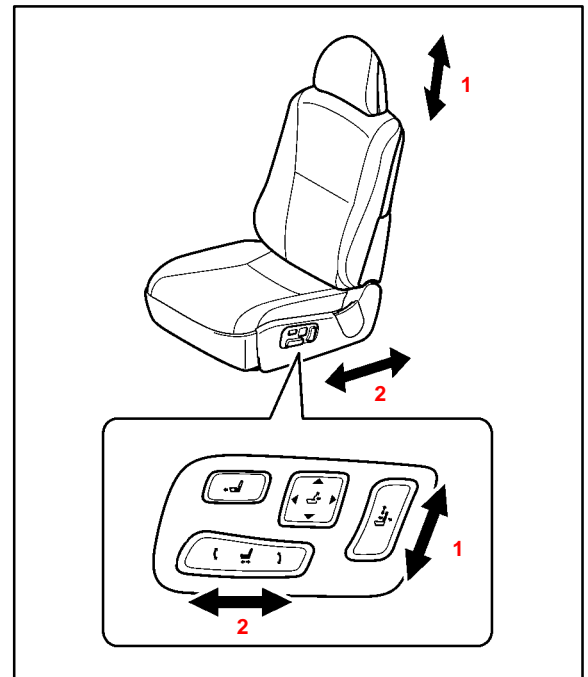

**Front Passenger's Seat Initialization Procedure**

1. Simultaneously operate the seatback angle switch to the rear side and the vertical height adjustment switch to the lower side until a beeping sound is heard.  
Within 10 seconds, simultaneously operate the seatback angle switch to the rear side and the vertical height adjustment switch to the lower side until a beep is heard.
2. Operate the seat position control switch and slide the seat to the rearmost position.

**NOTE:**

When operating the control switch, the warning buzzer sounds.

After operating the seat position control switch, the following operations will occur automatically:

- The head restraint automatically moves to the lowermost position and a beep is heard.
- The seat vertical height automatically moves to the uppermost or lowermost position and a beep is heard.

**HINT:**

The two seat operations described above occur simultaneously.

