


# DCC Fuse Installation During PDS

**Service Category** General

**Section** Pre-Delivery Service

**Market** USA

Lexus Supports  
 ASE Certification 

## Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2009	LS460	

## Introduction

The DCC fuses (30A) have been removed from the LS 460 at the assembly plant to reduce parasitic draw during transportation and storage.

The DCC fuses are stored in the blank space of the fuse block in the engine compartment and must be installed to their original locations during Pre-Delivery Service (PDS).


## Warranty Information

OP CODE	DESCRIPTION	TIME	ONP	T1	T2
N/A	Not Applicable to Warranty	—	—	—	—

## Installation Procedure

1. Push the core of the engine compartment side cover clips and remove them. Then remove the engine compartment side cover.

**Figure 1.**

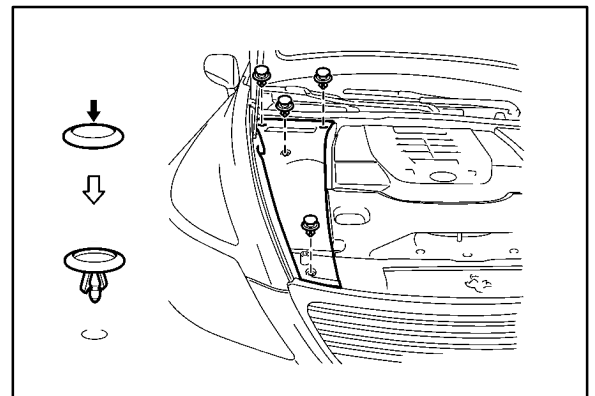

2. Make sure that the wheels are pointing straight ahead and the steering wheel is centered before installing the DCC fuses.

## DCC Fuse Installation During PDS


### Installation Procedure (Continued)

**NOTE**

The procedure above is necessary to perform the VGRS initialization correctly.

3. With the ignition switch OFF, install the DCC fuses in their original locations in the engine compartment fuse block.

Figure 2.

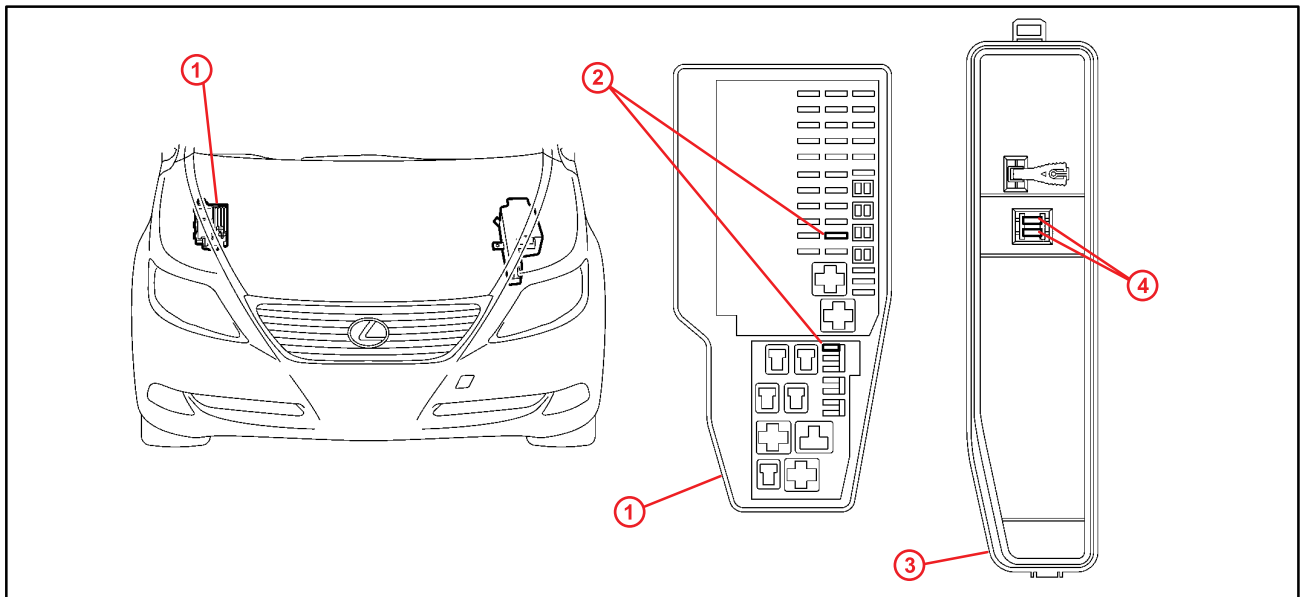

1	Fuse Block
2	Install DCC Fuses Here

3	Fuse Block Cover
4	Remove These DCC Fuses

**NOTE**

- With the ignition switch OFF, install the DCC fuses in their original locations in the engine compartment fuse block.
- While the vehicle is stored at the dealership, disconnect the negative (-) battery terminal to prevent battery discharge. Refer to TSIB No. [PG001-06](#), "Battery Maintenance for In-Stock Vehicles & Pre-Delivery," for battery maintenance information.
- If the DCC fuses are installed with the ignition switch in the "IG-ON" position, Diagnostic Trouble Codes (DTCs) will be detected. In that case, clear the DTCs.
- If the ignition switch is turned to the "IG-ON" position without the DCC fuses installed, turn the ignition switch to the "IG-OFF" position and wait for more than 10 seconds before installing the fuses.

## DCC Fuse Installation During PDS

---

### Installation Procedure (Continued)

4. Replace the engine compartment side cover.  
Installation is in the reverse order of removal.

When inserting the clips, refer to the illustration.

Figure 3.

