


# Oil Filter Cap Assembly Precautions

**Service Category** Engine/Hybrid System

**Section** Lubrication

**Market** USA

Lexus Supports  
ASE Certification 

## Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2008 – 2009	GS460	
2008 – 2009	IS F	
2007 – 2009	LS460	
2008 – 2009	LS600H	
2008 – 2009	LX570	

## Introduction

The applicable vehicles are equipped with a plastic oil filter cap assembly. To prevent damage to the oil filter cap assembly this procedure must be closely followed during oil filter replacement to avoid immediate and future oil filter serviceability concerns.

## Required Tools & Equipment

SPECIAL SERVICE TOOLS (SST'S)	PART NUMBER	QTY
Oil Filter Wrench	<a href="#">09228-06500-02</a>	1

\* Essential SST.

### NOTE

Additional SSTs may be ordered by calling SPX/OTC at 1-800-933-8335.

## Warranty Information

OP CODE	DESCRIPTION	TIME	OFF	T1	T2
N/A	Not Applicable to Warranty	–	–	–	–

## Oil Filter Cap Assembly Precautions

---

### Repair Procedure

**NOTE**

During oil filter replacement:

- Ensure SST 09228-06500-02 is used to remove and install the oil filter cap
- Inspect the SST for any damage or distortion before use
- Confirm that the SST is fully seated on the oil filter cap when removing/installing
- Ensure a torque wrench is used for oil filter cap installation

Torque: 25 N\*m 18 ft\*lbf

\*Failure to do any of the above may result in oil filter cap and/or SST damage

Please refer to Technical Information System (TIS) when replacing the oil filter:

[2007/2008/2009](#) LS460 Repair Manual,

- *Engine/Hybrid System – Lubrication – “1UR-FSE Lubrication: Oil and Oil Filter: Replacement”*

[2008/2009](#) LS600H Repair Manual,

- *Engine/Hybrid System – Lubrication – “2UR-FSE Lubrication: Oil and Oil Filter: Replacement”*

[2008/2009](#) GS460 Repair Manual,

- *Engine/Hybrid System – Lubrication – “1UR-FSE Lubrication: Oil and Oil Filter: Replacement”*

[2008/2009](#) IS F Repair Manual,

- *Engine/Hybrid System – Lubrication – “2UR GSE Lubrication: Oil and Oil Filter: Replacement”*

[2008/2009](#) LX570 Repair Manual,

- *Engine/Hybrid System – Lubrication – “3UR-FE Lubrication: Oil and Oil Filter: Replacement”*