

Preparation

Part Number: PT420-00045

NOTE: Part number of this accessory may not be the same as the part number shown.

Kit Contents

Item #	Quantity Reqd.	Description
1	1	Emergency Assistance Kit (EAK)
2	1	Tether Strap, Heavy Duty P/N: PT420-08040
3		

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Reqd.	Description
1		
2		
3		


Hardware Bag Contents


Item #	Quantity Reqd.	Description
1		
2		


Additional Items Required For Installation


Item #	Quantity Reqd.	Description
1		
2		
3		


Legend

 **STOP:** Damage to the vehicle may occur. Do not proceed until process has been complied with.

 **OPERATOR SAFETY:** Use caution to avoid risk of injury.

 **CAUTION:** A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.

 **TOOLS & EQUIPMENT:** Used in Figures calls out the specific tools and equipment recommended for this process.

 **REVISION MARK:** This mark highlights a change in installation with respect to previous issue.

Conflicts

Note: None

Recommended Tools

Personal & Vehicle Protection	Notes
None	
Special Tools	Notes
None	
Installation Tools	Notes
None	
Special Chemicals	Notes
None	

General Applicability

Note: All Toyota Vehicles

Recommended Sequence of Application

Item #	Accessory
1	
2	
3	

*Mandatory

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Toyota dealer for a copy of this document.

NOTES: "EAK" denotes Emergency Assistance Kit

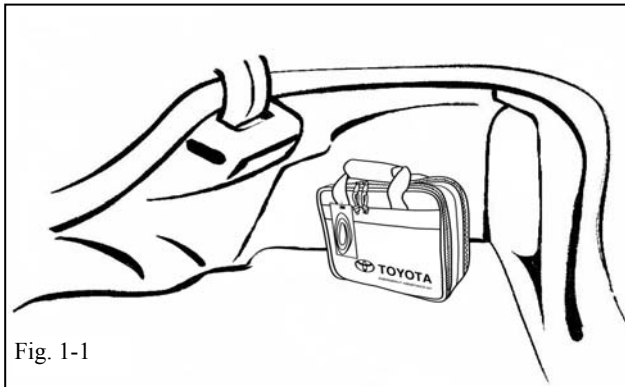


Fig. 1-1

1. Install Emergency Assistance Kit.

(A) Cars / SUVs / VAN:

- (1) Remove EAK from package.
- (2) Place the EAK in the trunk / cargo area of the vehicle. (Fig. 1-1)



- (3) Use included strap to secure EAK to vehicle trunk / cargo area, as applicable.

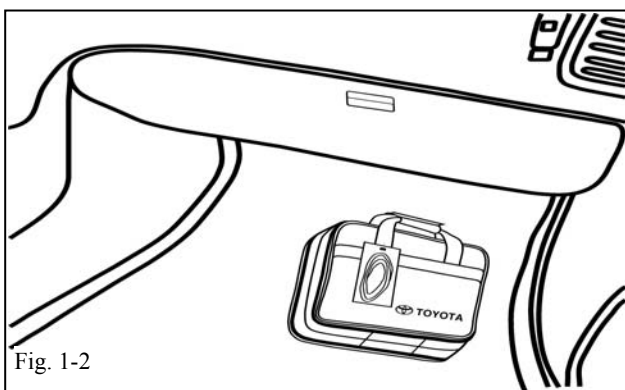


Fig. 1-2

(B) Trucks:

- (1) Remove EAK from package.
- (2) Place EAK on the right front floor of vehicle. (Fig. 1-2)



- (3) The customer may use included strap to secure to any area of the vehicle, as applicable.

Checklist - these points **MUST** be checked to ensure a quality installation.

Check:

Look For:

Accessory Function Checks

Confirm secure placement of Emergency Assistance Kit.

Whenever possible, "Toyota" name is visible and upright.

Confirm tether strap is tightened and kit is securely in place.

Loose strap and secure placement.

Vehicle Function Checks